

**PROBLEM:
Z AFM
NOT WORKING**

ZAFM + Plugged In (installed correctly)

**Key on Red
Diag Light**

YES

NO

**Check your
connections**

Bike Running

Red light should go out

Yellow light (heater [HTR])
should be solid on

**Yellow light
should start
blinking rapidly
after 90 seconds**

YES

NO

**Reset the
Z AFM**

Reset by unplugging
the white connector
then reconnect

**Z AFM
Working**

In the software readings for RPM and
TPS should be as follows:

RPM (Stable above 3,000 RPM)

TPS (Stable at 5% and above)

Gear (Stable)